## INSTALLATION INSTRUCTIONS FOR M-PCS14 OUTDOOR SHOWER

OUTDOOR SHOWERS INSTALLATION/MAINTENANCE INSTRUCTIONS

Prior to installation:


Read all instructions and refer to local codes.

**SINCE 1853** 

- Supply line must be flushed of all foreign materials such as pipe dope, chips, etc.
- Shower piping and valve must be drained prior to being subjected to freezing temperatures.
- Maximum recommended working water pressure is 100 psi.

## **INSTALLATION INSTRUCTIONS:**

- 1.) Refer to roughs for desired location of the shower head.
- 2.) Install vandal resistant fasteners into anchor plate prior to pouring concrete to keep threads on anchor plate clean of concrete.
- 3.) Tap anchor plate into ground and check that anchor plate is level and even with the floor.
- 4.) Install supply line with 1/2" stub out above anchor plate.
- 5.) Assemble O-Ring adapter to supply stub out, aligning mounting hold on O-Ring adapter to holes on anchor plate and secure with provided hex screws, make adjustments if needed.
- 6.) Pour concrete until it is level with top of anchor plate.
- Remove vandal resistant fasteners from anchor plate and position fixture over anchor base while engaging O-Ring connection and aligning mounting points.
- 8.) Secure fixture with vandal resistant fasteners.
- 9.) Turn on water supply and test for leaks.

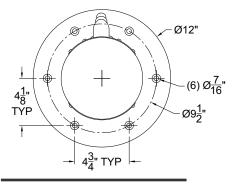

Please visit **www.murdockmfg.com** for most current specifications.

MURDOCK MFG. • 15125 Proctor Avenue • City of Industry, CA 91746 USA Phone 800-453-7465 or 626-333-2543 • Fax 626-855-4860 • www.murdockmfg.com

۵). ACCESS PANEL INDICATES SHOWER (6) 3/8-16 x 3/4" ORIENTATION VANDAL RESISTANT SCREWS S (2) 1/4-20 x 1/2" 1, 2 ନ୍ମ **HÉX SCREW** 9 **O-RING INLET ADAPTER** ANCHOR PLATE 3/4" NPTM CONCRETE STUB-OUT. BY OTHERS Λ  $\triangleleft$ Λ Member of MORRIS GROUP

7020-977-001

## INSTALLATION INSTRUCTIONS FOR M-PCS14-FRU-IAP

OUTDOOR SHOWERS INSTALLATION/MAINTENANCE INSTRUCTIONS

Prior to installation:

MULCO


Read all instructions including FRU Freeze Resistant Valve System, #9938-340-0M1 manual and refer to local codes.


**SINCE 1853** 

- Supply line must be flushed of all foreign materials such as pipe dope, chips, etc.
- Maximum recommended working water pressure is 100 psi.

## **INSTALLATION INSTRUCTIONS:**

 - 1.) Refer to roughs for desired location of the shower head and FRU assemblies.
- 2.) Install vandal resistant fasteners into -IAP Inground Anchor Plate prior to pouring concrete to keep threads on anchor plate clean of concrete.
- 3.) Tap anchor plate into ground and check that anchor plate is level and even with the floor prior to pouring.
- 4.) Refer to FRU manual for FRU installation.
- 6.) Pour concrete until it is level with top of anchor plate.
- 7.) Remove vandal resistant fasteners from anchor plate and position fixture over anchor base.
- 8.) Secure fixture with vandal resistant fasteners.
- 9.) Flush supply lines before making up connections to valve. Turn on water supply and test for leaks.

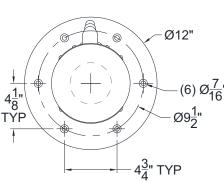



for most current specifications.

MURDOCK MFG. • 15125 Proctor Avenue • City of Industry, CA 91746 USA Phone 800-453-7465 or 626-333-2543 • Fax 626-855-4860 • www.murdockmfg.com

11 N 11 1 11 . 11 1 11 11 14 W A 111 ACCESS PANEL INDICATS 11 SHOWER ORIENTATION 11 3/8"-16 UNC x 3/4" LONG, FLAT HEAD, VANDAL RESISTANT SCREWS ъ II -IAP IN-GROUND ANCHOR PLATE S Ø6" OPENING BRANCH ARM FREEZE RESISTANT VALVE CASING Member of

7020-977-001

MORRIS GROUP