


- A- PROVIDE STRUCTURALLY SOUND FOUNDATION FOR ANCHORING OF FOUNTAIN WHERE WATER WILL NOT POOL AND ROUGH-IN WASTE OUTLET (1) 2" HIGH  $(\pm 3/8")$  AT FOUNTAIN CENTERLINE FOR 1-1/4" NPT FEMALE WASTE OUTLET ADAPTER (2).
- B- PROVIDE FOUR FLOOR ANCHORING LOCATIONS AS SHOWN IN BASE FOOTPRINT DETAIL. HOLES (3) THRU BASE ARE 3/8" DIAMETER. FLOOR ANCHORS AND ANCHORING HARDWARE (4) TO BE PROVIDED BY INSTALLER.
- C-ASSEMBLE WASTE ADAPTER (2) TO 1-1/4" NPT WASTE PIPE (1) BY OTHERS. DO NOT DAMAGE O-RING (5) ON ADAPTER.
- D- LUBRICATE O-RING (5). O-RING LUBRICANT TO BE PROVIDED BY INSTALLER. CAREFULLY SET FOUNTAIN STRAIGHT DOWN OVER THE WASTE ADAPTER (2) WITHOUT JAMMING TO ENSURE THE O-RING (5) DOES NOT ROLL OFF ADAPTER (2).
- E- SECURE FOUNTAIN TO FOUNDATION USING HARDWARE 4 BY OTHERS.
- F- PROVIDE WATER SUPPLY WITH UNION AND SHUTOFF VALVE BY OTHERS TO 3/8" NPT FEMALE INLET (6). NOTE: FLUSH WATER SUPPLY OF ALL DEBRIS PRIOR TO CONNECTING TO FOUNTAIN.

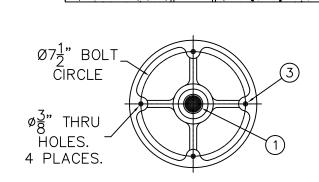

**BASE FOOTPRINT** 



MURDOCK—SUPER SECUR P.O. Box 3527 City of Industry, CA 91744 Phone: (800) 591–9880 www.murdock—supersecur.com

STEEL PIPE PEDESTAL MOUNTED DRINKING FOUNTAIN

MANUFACTURE DATE

JANUARY 2006

JANUARY 2006 TO PRESENT DATE ISSUED 10/21/08

DATE REVISED


08/14/12


DRAWING NUMBER

9938-255-0M1

[1)



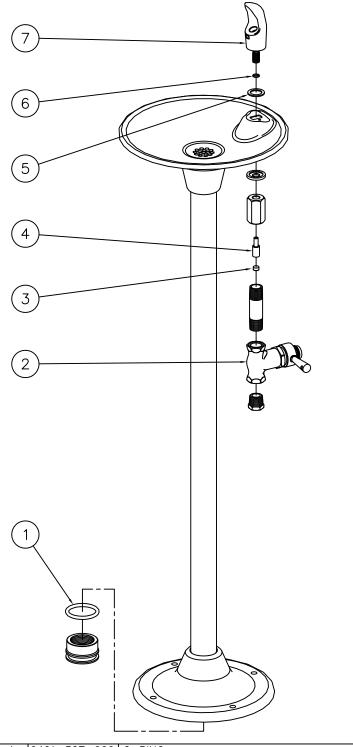

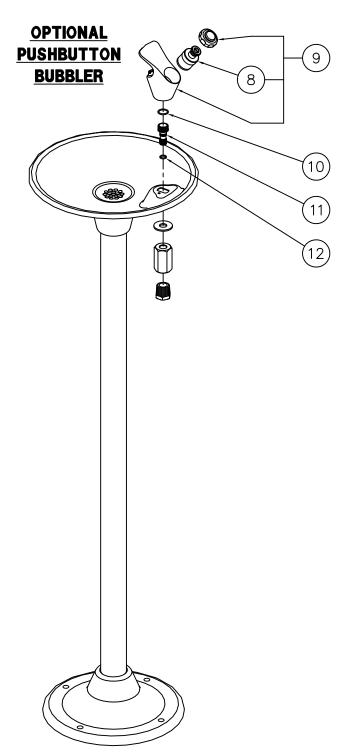

1	0401-327-000	O-RING	7	7018-112-199	SOLID STAINLESS STEEL BUBBLER		
2	7018-010-199	SELF CLOSING LEVER VALVE	8	7000-060-000	VALVE CARTRIDGE		
3	0471-010-000	FLOW REGULATOR	9	2990-013-002	DECK MOUNTED SST PUSHBUTTON BUBBLER		
4	7018-008-199	FLOW REGULATOR ADAPTER	10	0404-015-000	O-RING		
5	7000-007-000	BUBBLER GASKET	11	7018-011-199	BUBBLER ADAPTER		
6	0404-011-000	O-RING	12	0404-011-000	O-RING		
ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION		
MUDDOCK CUDED SECUD TITLE							

MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Protor Ave Industry, CA 91746 Phone: (800) 591–9880 www.murdock—supersecur.com

## STEEL PIPE PEDESTAL MOUNTED DRINKING FOUNTAIN

MANUFACTURE DATE DATE ISSUED 10/21/08 **JANUARY 2006** DATE REVISED TO PRESENT 05/19/16

DRAWING NUMBER


9938-255-5MO

# LEVER VALVE DRINKING FOUNTAIN

#### **CONDITION:**

#### **SOLUTION:**

#### NO WATER FLOW:

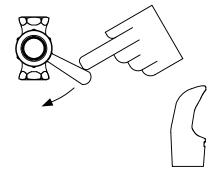


- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect strainer (by others) for debris clean.
- 1.4 Inspect flow regulator for debris clean or replace.
- 1.5 Replace lever valve.

# WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 Inspect lever valve for debris clean.
- 2.2 Replace lever valve.

### **REDUCED WATER FLOW:**

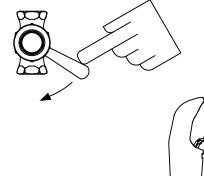

- 3.1 Check water main supply for 20 psig minimum flow pressure.
- 3.2 Inspect stop (by others) open & no debris.
- 3.3 Inspect strainer (by others) for debris clean.
- 3.4 Inspect bubbler for debris clean.
- 3.5 Inspect flow regulator for debris clean or replace.
- 3.6 Replace lever valve.

Refer to drawing #9940-206-0M1 for Lever Valve Maintenance Detail to locate solutions above.

TO PRESENT

MURDOCK-SUPER SECUP P.O. Box 3527 City of Industry, CA 91744 Phone: (800) 591-9880	*
www.murdock-supersecur.com	MANU
	⊢ J.

# LEVER DRINKING FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS

MANUFACTURE DATE

JANUARY 2006


DATE ISSUED

10/21/08

DATE REVISED 9940-205-0M1

DRAWING NUMBER



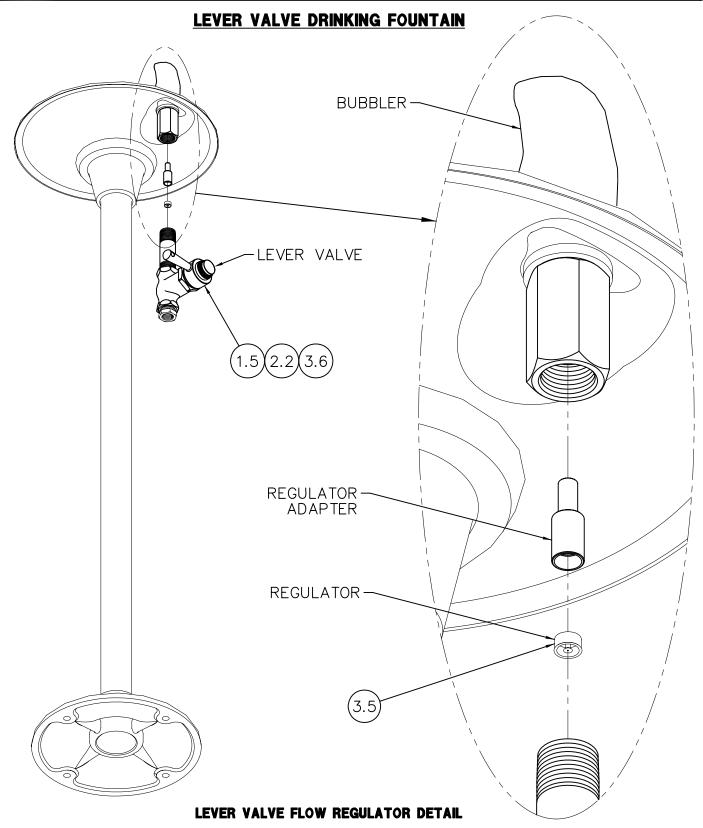

Refer to drawing #9940-205-0M1 for Valve Maintenance Instructions numbered solutions detailed above.

