


00-0-0

**Step 1**Assembly of the Legs and desktop

SKU: CD-46SPT

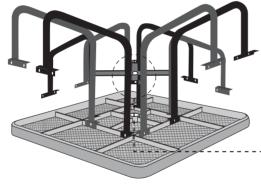



Step 2
Assembly of the X-Link onto the 4 Legs



Step 3
Assembly of the Legs and Seats

## Mounting Hardware Instruction

## Step 4

- 1. Using provided drill bit, drill hole into the concrete, block or stone to a depth of 2 -1/2".
- 2.Blow out the dust in the hole.
- 3. Place bracket over tubing
- 4. Secure screw flush with bracket into drilled hole.
- 5. Repeat on remaining screws.

